

<b>Cartridge</b>	<b>Type machine</b>
<b>TONERS</b>	
Brother TN-6300/ 6600/7600	BROTHER TN 6300/ 6600/ 7600
Canon A-30	CANON COPIER A-30
Canon E-30	CANON COPIER FC-210
Canon EP-22/ HP C4092A	HP 1100
Canon EP-32/ HP C4096A	HP 2100
Canon EP-52/ HP C4127X	HP 4000/ 4050
Canon EP-62/ HP C4129X	HP 5000
Canon EP-72/ HP C4182X	HP 8100
Canon EP-A/ HP C3906A	HP 5L/ 6LX/ 6LSF/ 3100
Canon EP-B/ HP C3900A	HP 4V/ MV (A3)
Canon EP-E HC/ HP 92298X	HP 4+ / 4M/ 4M+
Canon EP-E/ HP 92298A	HP 4+ / 4M/ 4M+
Canon EP-L/ HP 92275A	HP IIP/ IIIP
Canon EP-N/ HP 92291A	HP IIISI/ 4SI
Canon EP-P/ HP 92274A	HP 4P/ 4L/ ML/ MP
Canon EP-V/ HP C3903A	HP 5P/ 5MP/ 6P/ 6MP
Canon EP-W/ HP C3909A	HP 5SI/ 8000
Canon EP-Y/ HP C4127A	HP 4000/ 4050
Canon FX-1	CANON FAX L-760/ L-770/ L-780
Canon FX-2	CANON FAX L-500/ L-550/ L-600
Canon FX-3	CANON FAX L-250/ L-300
Canon FX-4	CANON FAX L-800/ L-900
Canon FX-6	CANON FAX L-1000
HP C7115A/X	HP LASERJET 1200/ 1220
<b>INKJET</b>	
Canon BC-01	CANON BJ 10/ 20/ FAX
Canon BC-02	CANON BJ 100/ 200/ (e)SERIE/ BJC 1000
Canon BC-05	CANON BJC 210/ 240/ 250/ 1000
Canon BC-20	CANON BJC 2500/ 3000 BT/4000/4100/4200
Canon BX-2	CANON FAX B310/ 320/ 340/ 360
Canon BX-3	CANON FAX B100/ 540/ 550
HP 51625A clear	HP DESKJET 500 C SERIE
HP 51626A	HP DESKJET 500 SERIE
HP 51629A	HP DESKJET 600 SERIE
HP 51633M	HP DESKJET 310/ 320/ 340
HP 51645A/G	HP DESKJET 1600C
HP 51649A	HP DESKJET 600C
HP C1823D	HP DESKJET 710C
HP C6578A/D/G	HP DESKJET 930C
HP C6614A	HP DESKJET 610C/ 640C
HP C6615A	HP DESKJET 840C
HP C6625A	HP DESKJET 840 SERIE

Cartridge	Type machine
<b>TONERS</b>	
HP C8061A/X	HP COLORJET 4100
HP C8543X	HP LASERJET 9000
HP Q1338A	HP LASERJET 4200
HP Q1339A	HP LASERJET 4300
HP Q2610A	HP LASERJET 2300
HP Q2613A/X	HP LASERJET 1300
Lexmark 12A0725/825	LEXMARK OPTRA SE/ 3455
Lexmark 12A5745	LEXMARK OPTRA T
Lexmark 12A5840	LEXMARK OPTRA T
Lexmark 12A5845	LEXMARK OPTRA T610/616
Lexmark 12A6730	LEXMARK T520/ T522
Lexmark 12A6760	LEXMARK T620/ T622
Lexmark 12A6830	LEXMARK T520/ T522
Lexmark 12A6860	LEXMARK T620/ T622
Lexmark 1380520	LEXMARK 4019/ 4028/ 4029
Lexmark 1380850	LEXMARK 4039/ 850
Lexmark 1380950	LEXMARK 4039/ 950
Lexmark 1382100	LEXMARK OPTRA 4049/ 100
Lexmark 1382150	LEXMARK OPTRA R/ R+/ LX/ 4049/150
Lexmark 1382920/5	LEXMARK OPTRA S 4059
Panasonic UG-3313	PANASONIC UF 550/ 560/ 770/ 880
Panasonic UG-3350	PANASONIC UF 585/ 595
OVERIGE TONERS	
HP C6656A	DESKJET 5550C bl
HP C6657A	DESKJET 5550C c
HP C8727A	DESKJET 3320/ 3420 bl
HP C8728A	DESKJET 3320/ 3420 c
Lexmark 10N0016	LEXMARK Z25/ 35/ X75/ 13/ Z13/ 23E/ 33
Lexmark 10N0026	LEXMARK Z25/ 35/ X75/ 13/ Z13/ 23E/ 33
Lexmark 10N0217	LEXM. COLORJET i3/ Z13/ Z23E/ Z25/ Z33/ Z35
Lexmark 10N0227	LEXM. COLORJET i3/ Z13/ Z23E/ Z25/ Z33/ Z35
Lexmark 12A1970/ 1975	LEXMARK OPTRA COLOR 40/45 bl
Lexmark 12A1980/ 1985	LEXMARK OPTRA COLOR 40/45 c
Lexmark 13400HC	LEXMARK CJ 4076 c
Lexmark 13619HC	LEXMARK CJ 4076 c
Lexmark 1380620	LEXMARK CJ 1020
Lexmark 15M0120	LEXMARK CJ Z51/ Z42/ Z52
Lexmark 17G0050/60	LEXMARK CJ Z12/ Z22/ Z32